


RoomWizard™ Installation Instructions

Mounting Application:
Wall

Power and Data:
Surface Mounted
with Cable Manager

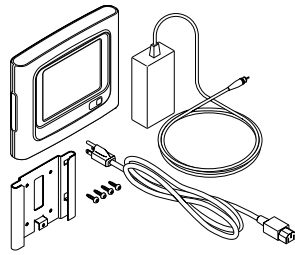

RoomWizard™
DTPRW01



Wire Management Kit
DTPWA01


Needed for installation:

- Power drill
- Drill bit
- Phillips head
- Level
- Wall anchor

1 Measure 49"/1245mm from floor to bottom of wall plate.

Using a Level to level the wall plate and using the wall plate as a template, mark the four screw holes.

Insert four wall anchors/plugs for #6 screws and attach wall plate making sure it is level.

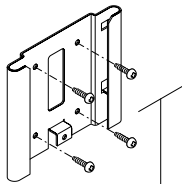

49"
1245mm



Note:

Before attaching wall plate, check height of base trim to insure that the power supply holder and cable manager have clearance.

Floor

2 Attach power supply holder onto cable manager. Attach cable manager onto wall plate, loosely tighten screw.



Allow cable manager to swing to vertical, check with Level. Mark position of power supply holder.

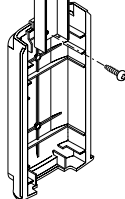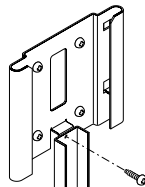

3 Tighten screw between wall plate and cable manager.


Use the rear cover of power supply holder as a template to mark screw holes.

Insert two wall anchors/plugs and screws.

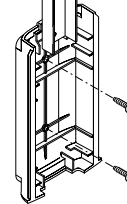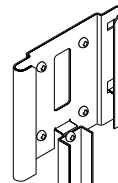


4 Pull data cable to 2"/51mm beyond wall plate.

Insert power supply into power supply holder. Route cable to wall plate.

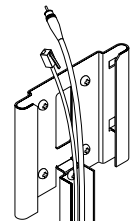

Excess cords can be wrapped around posts.

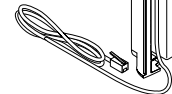


Mounting Application:

Wall


Power and Data:

Surface Mounted
with Cable Manager

- 5** Slide power supply cover onto power supply back plate. Attach top and bottom end caps to power supply cover.

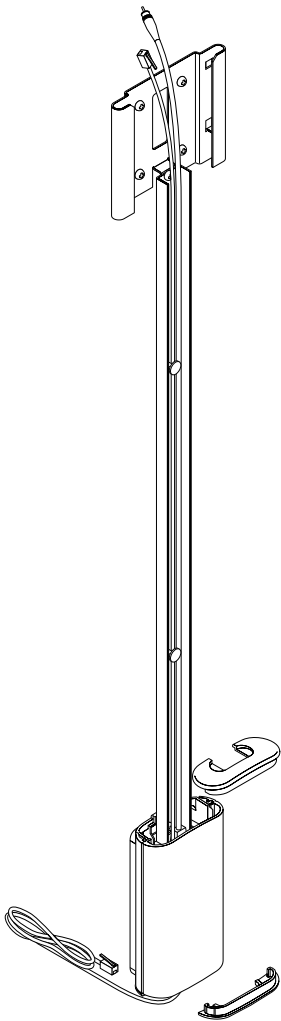


- 6** Place cable manager cover into recess of top end cap. Push cover onto cable manager.

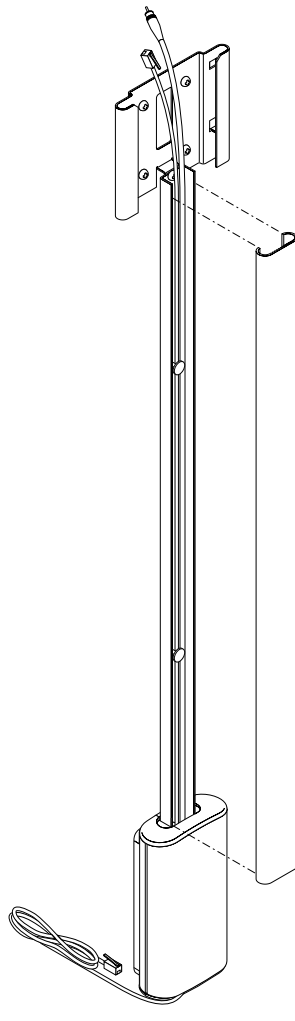


- 7** Insert cable connectors into head unit. Slide head unit down into wall plate.

Plug in the power cord.
Your RoomWizard is now ready to be commissioned for use.

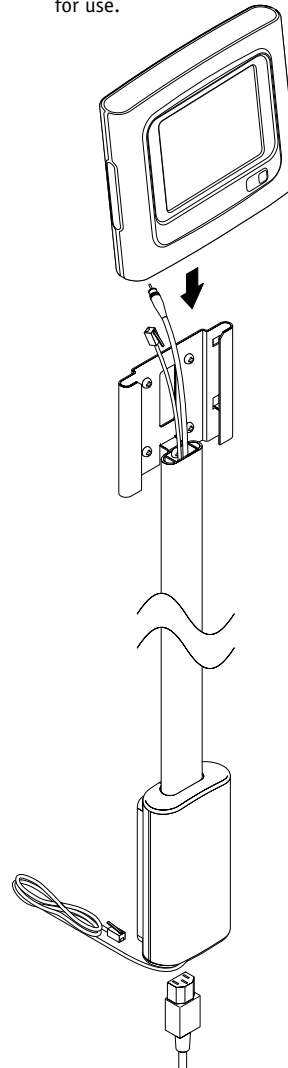

To Remove the Head Unit from the Wall Bracket

Stand in front of the RoomWizard and grab the unit from the sides with both hands. Tilt the unit toward you.

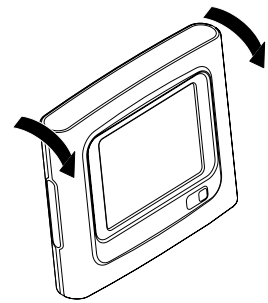

With the unit tilted, lift straight up. You can now disconnect the cables.

